
Fitting instructions

Make : Saab 900

HB; '93 -> / Coupé; '94 ->

/ 9-3; 1998->


Type: 2244





- NL Montagehandleiding
- GB Fitting instructions
- D Montageanleitung
- F Instructions de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montażu
- SF Asennusohjeet
- CZ Pokyny k montáži
- H Szerelési útmutató
- RUS Руководство для монтажа





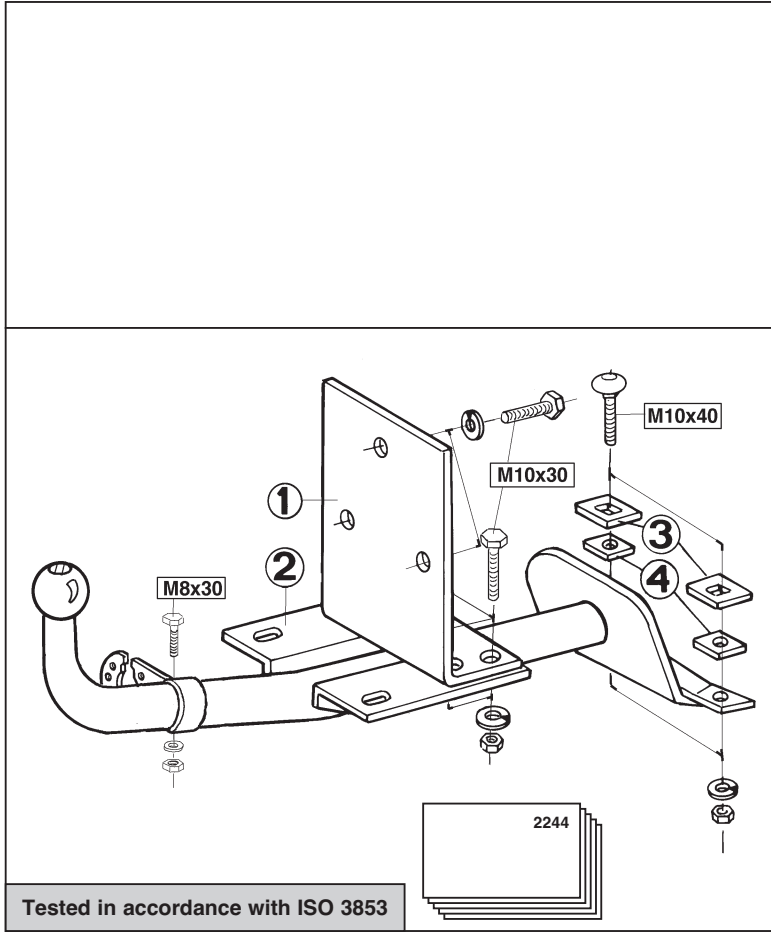

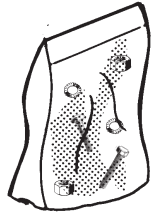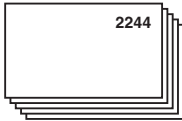


BRiNK[®]


Your perfect fit
brink.eu



Tested in accordance with ISO 3853




-  (1x) M8x30
-  (7x) M10x30
-  (2x) M10x40
-  (1x) M8 self-locking
-  (10x) M10
-  (1x) M8
-  (9x) M10
-  (2x) 40x6 L=40
-  (2x) 40x5 L=40

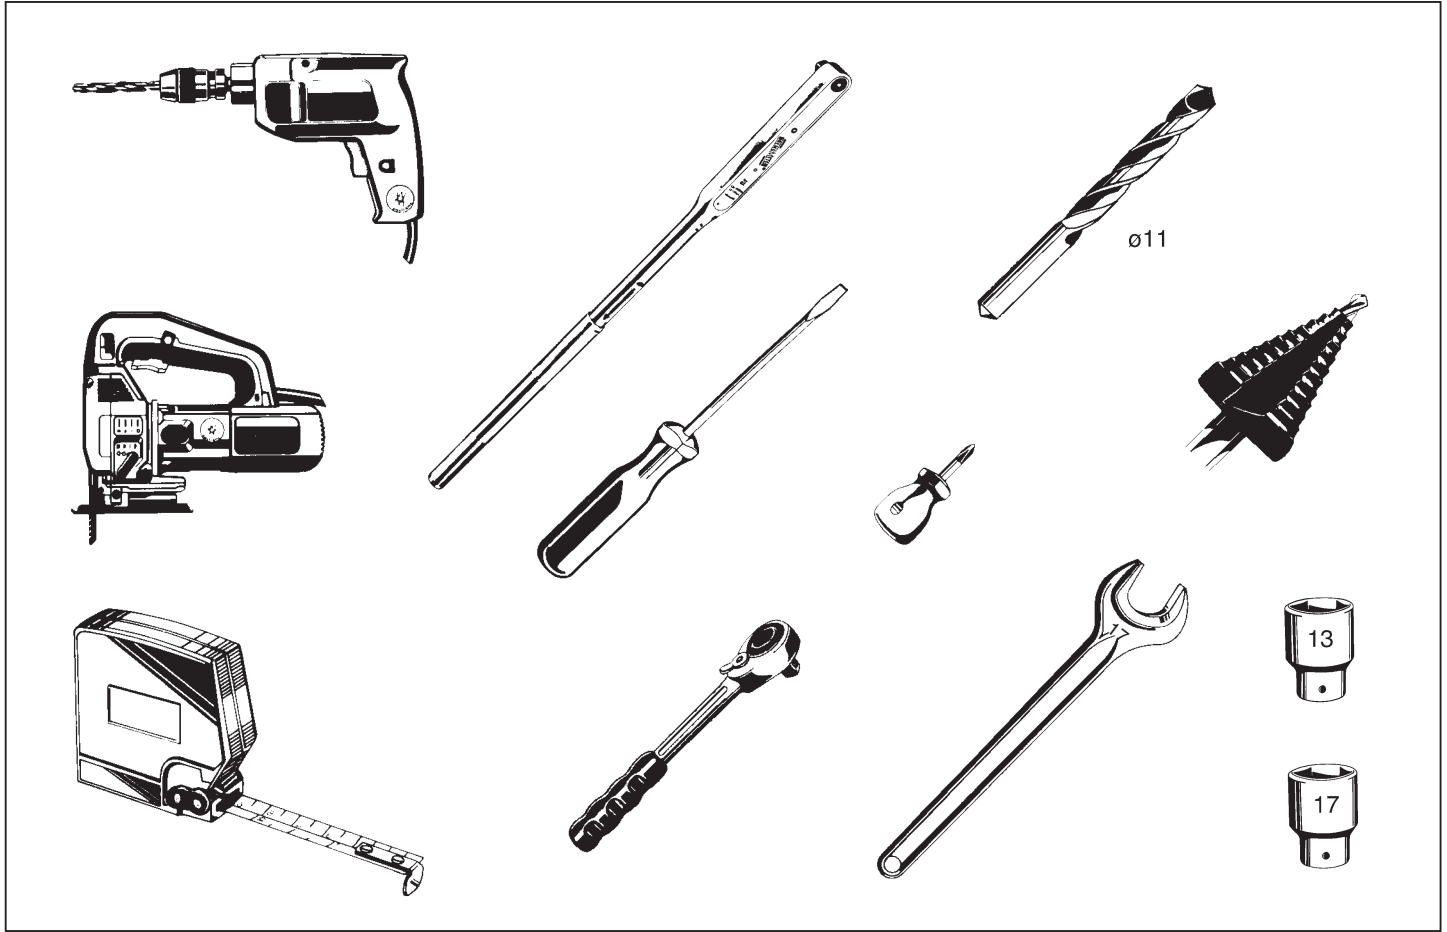



approved
e11 00-3602

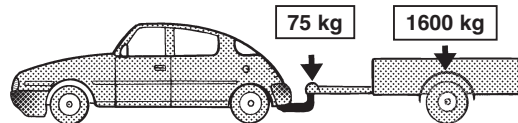

8.8



8

D=8,5 kN

